

**Operation:**

Material feeding

Fixed vice lock

Rotation of the blade and delivery of the coolant, head down-feed until the finishing of the cut, feeding carriage return until the fixed measure

Head return, blade revolution and coolant delivery stopping

Vice opening

Cycle repetition

Blade holder shaft on bearings

Two pneumatic vices

Teflon jaws to fix the piece

Service tools

Instructions manual and spare parts

**Overall dimensions:**

3800 mm x 1600 mm x 1700 mm